



Nr. 22  M5-45(50)	Nr. 25  M5	Tvirtinimų į žemę montavimas Fasteners to the ground installation 1	
--	---	--	---

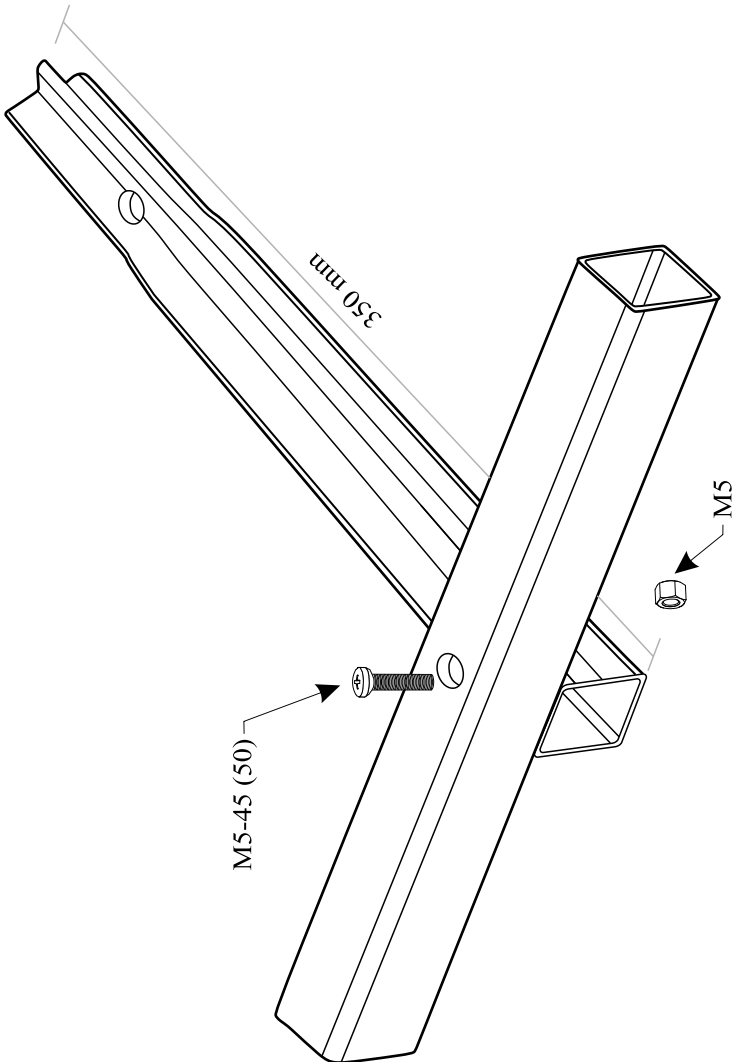

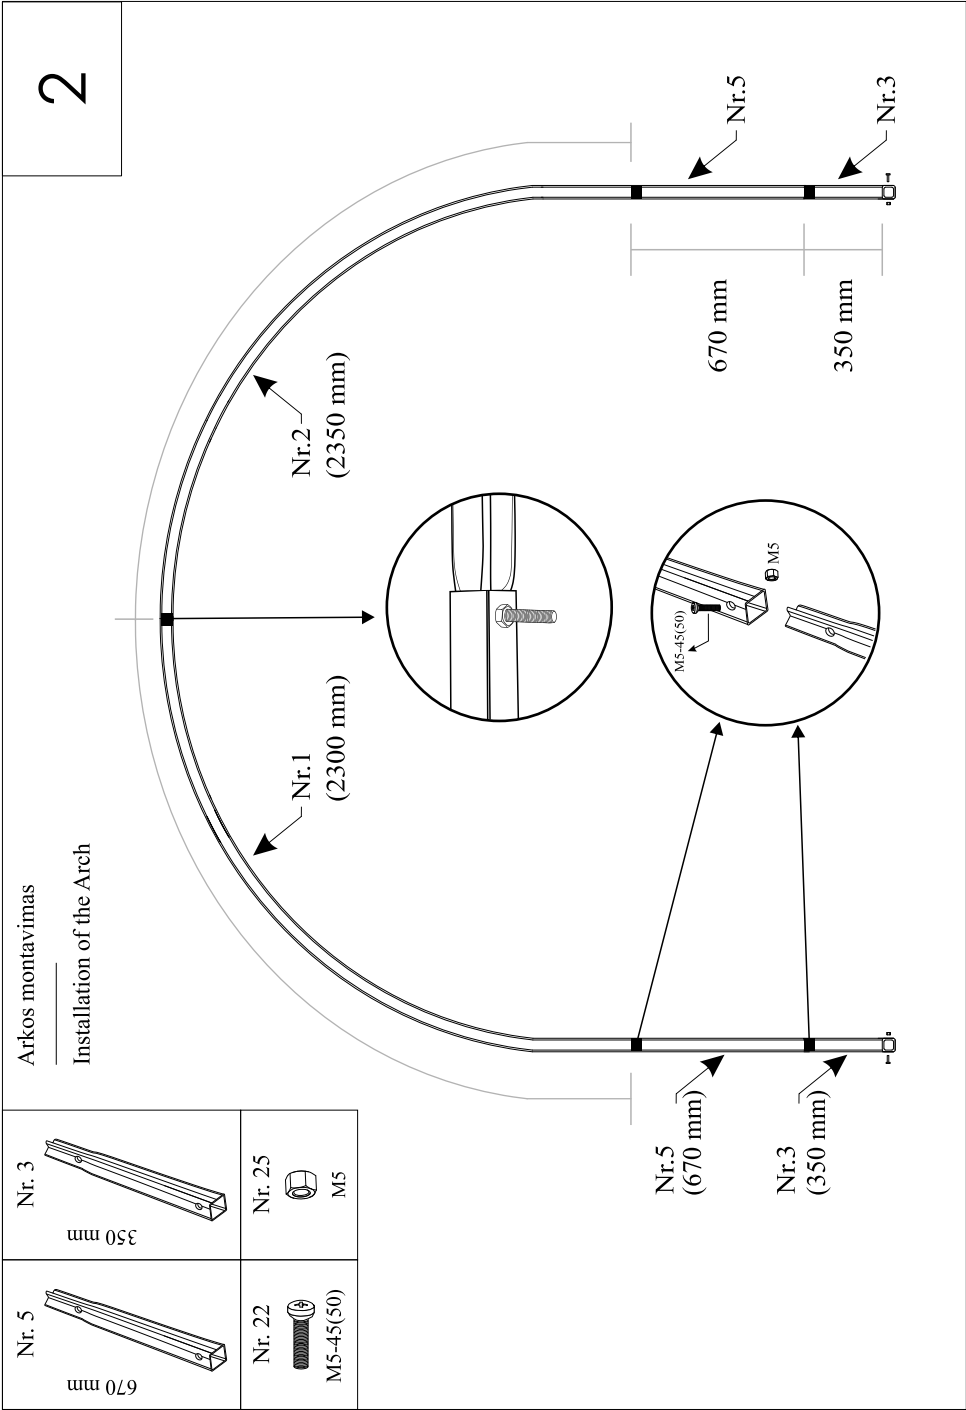

Installation of the side fastening.




Nr. 20  M5 - 16	Nr. 25  M5
--	---


Nr. 13  1320 mm	Nr. 20  M5 - 16	Nr. 31 
	Nr. 25  M5	Nr. 24  4,2x19 cm

Durų - lango skersinių statramsčių tvirtinimas (priekis)

Fastening of the transverse struts of door window (the front part)

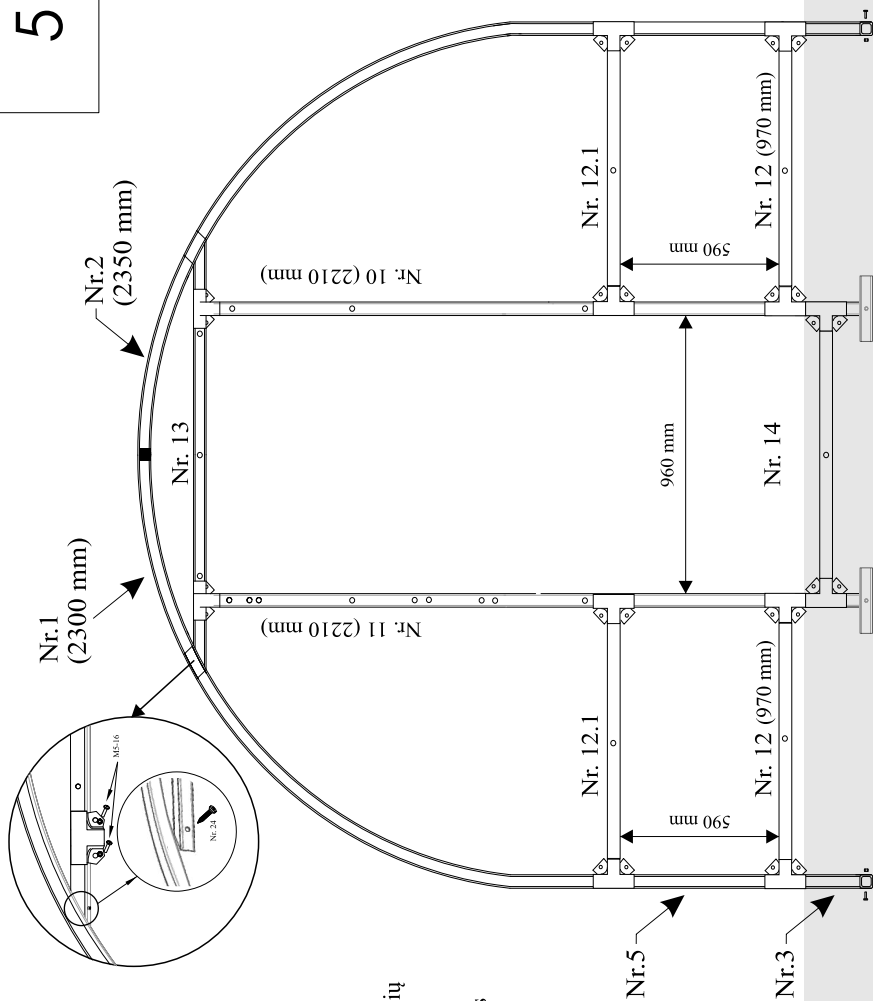

ŽEMĚ /
GROUND

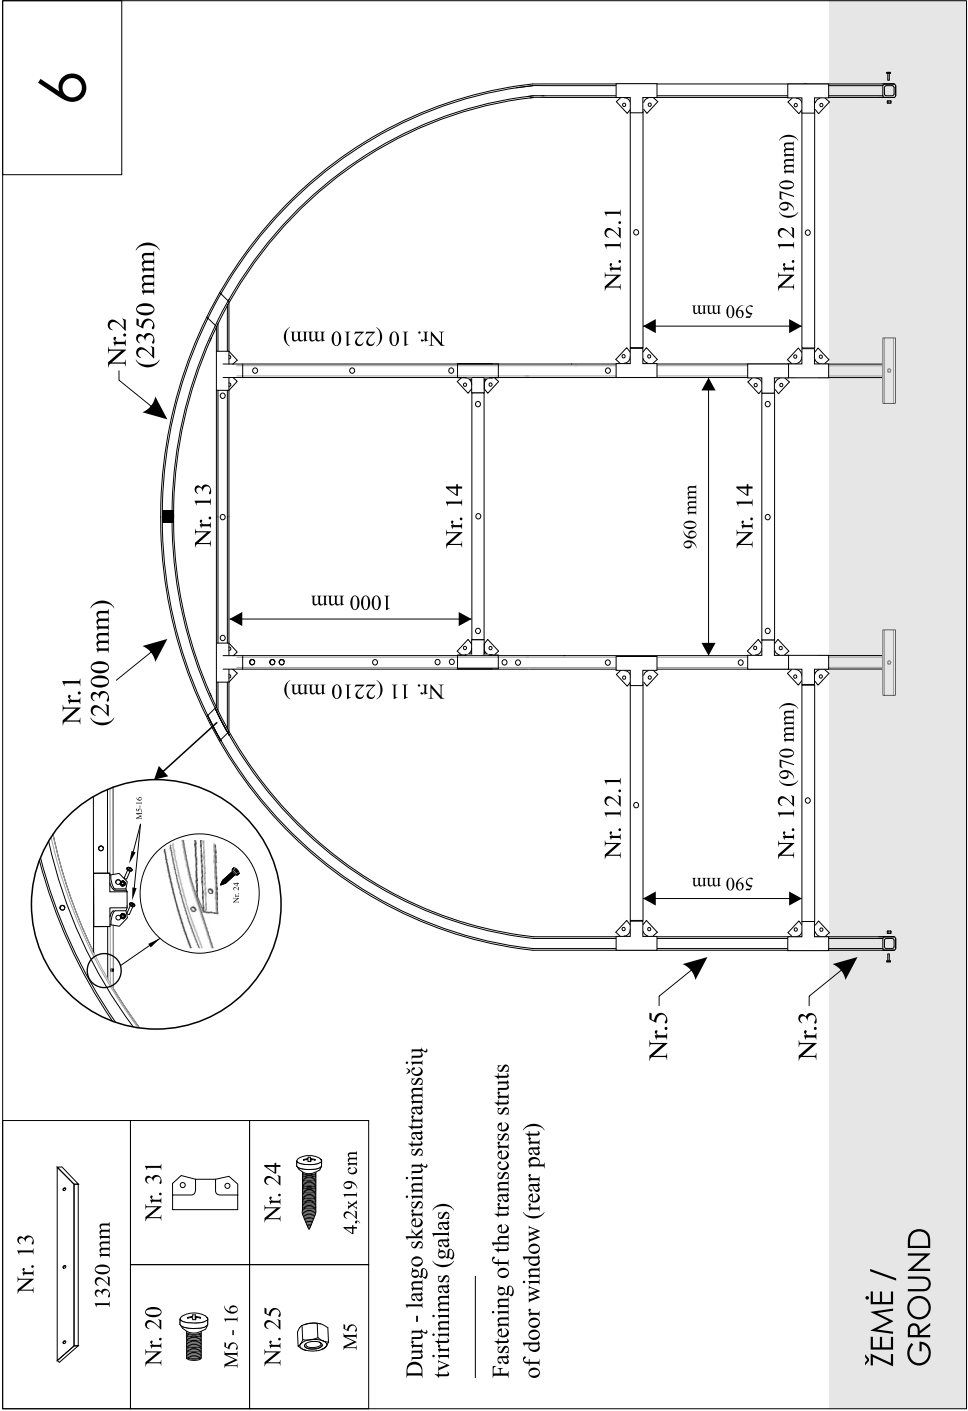


Nr. 22  M5-45(50)	Nr. 24  4,2x19 cm	Nr. 25  M5
---	---	--


Nr. 27 	Nr. 28 
--	--

Šoninių dalių ir durų dangos montavimas (priekis)
Installation of the polycarbonate to the side parts and door cover (front)


7

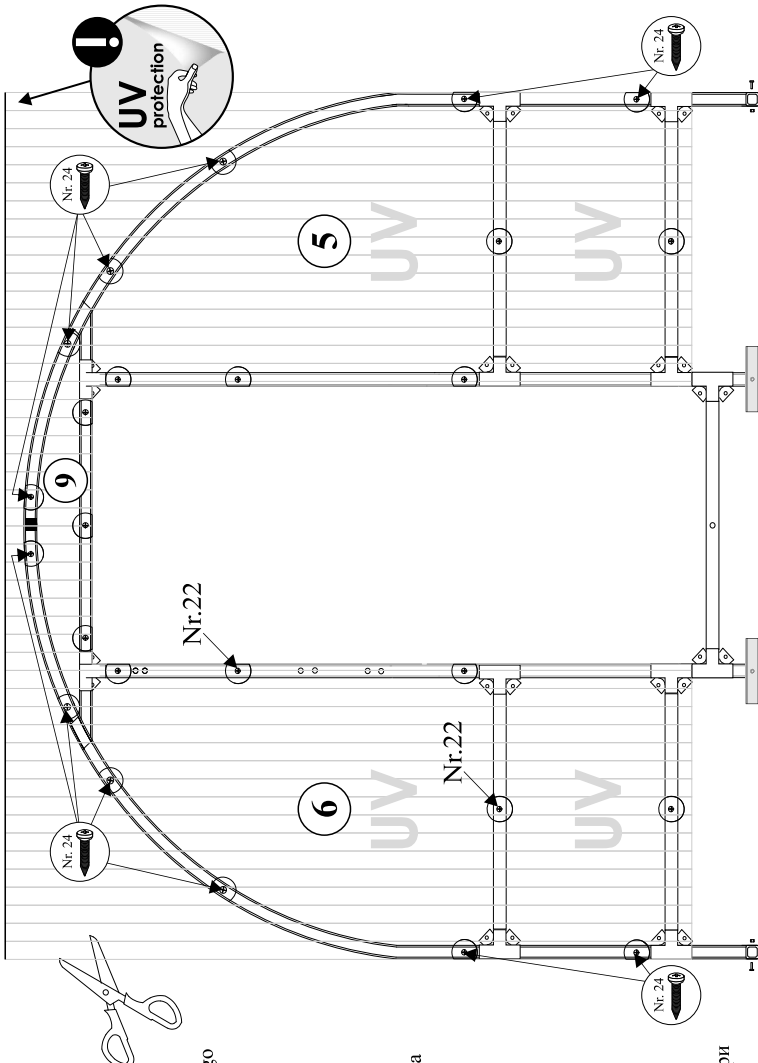


LT	⑤ ⑥	Šoninė dalis	⑨	Viršutinis durų lango polikarbonatas	⑤ ⑥	Side part	⑨	Top door window polycarbonate	⑤ ⑥	Sānu daļa	⑨	Polikarbonāta detaļa virs durvīm	⑤ ⑥	Kūlgmised osad	⑨	Ukse akna tūlīmīne polikarbonat	⑤ ⑥	Seitenteil	⑨	Oberes Türfenster aus Polycarbonat	⑤ ⑥	Боковая часть	⑨	Окно верхней двери из поликарбоната
EN	⑤ ⑥	Side part	⑨	Top door window polycarbonate	⑤ ⑥	Sānu daļa	⑨	Polikarbonāta detaļa virs durvīm	⑤ ⑥	Kūlgmised osad	⑨	Ukse akna tūlīmīne polikarbonat	⑤ ⑥	Seitenteil	⑨	Oberes Türfenster aus Polycarbonat	⑤ ⑥	Боковая часть	⑨	Окно верхней двери из поликарбоната				

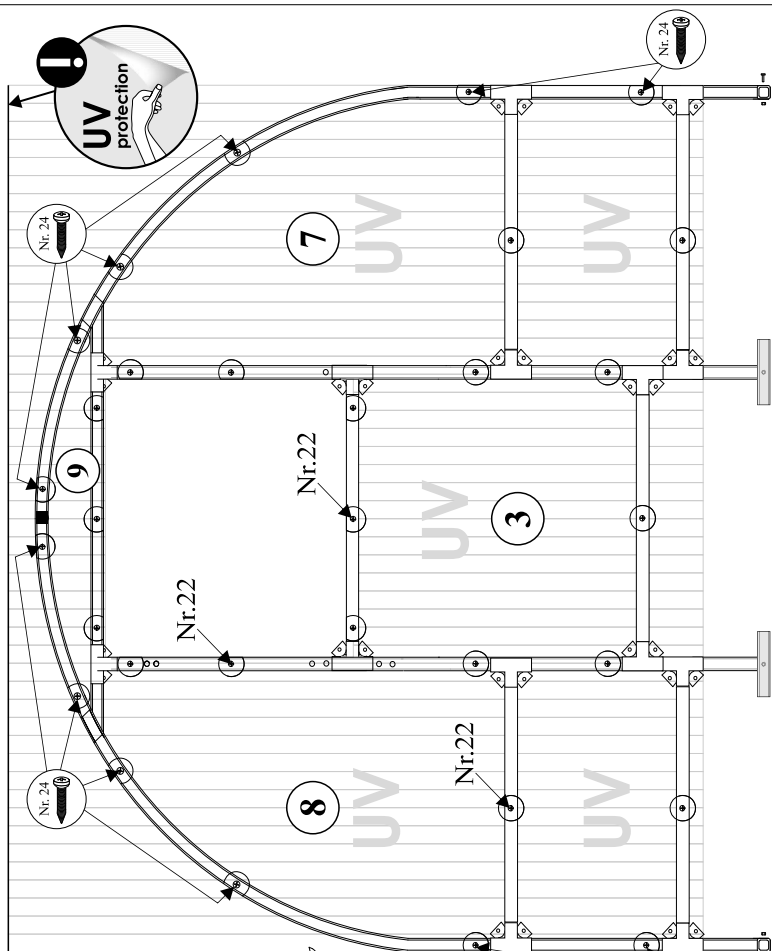

③	Lango apācīa
⑦⑧	Šoninė dalis
⑨	Viršutinis durų lango polikarbonātas
③	The bottom of the window
⑦⑧	Side part
⑨	Top door window polycarbonate
③	Loga apakša
⑦⑧	Sānu daļa
⑨	Polikarbonāta detaļa virs durvīm
③	Akende alus
⑦⑧	Külgmised osad
⑨	Ukše akna ülemine polikarbonaat
③	Unten im Fenster
⑦⑧	Seitenteil
⑨	Oberes Türfenster aus Polycarbonat
③	Нижняя часть окна
⑦⑧	Боковая часть
⑨	Окно верхней двери из поликарбоната

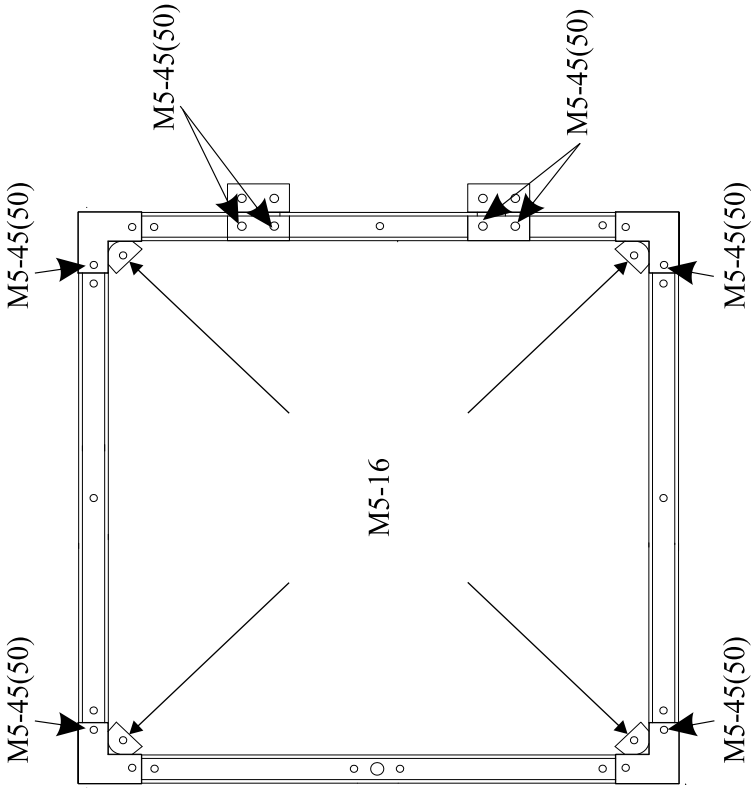Durys - langas/ Door - window/ Durvis - logs/ Uksed - aknad	Nr. 1  885 mm	Nr. 2  885 mm	Nr. 3  950 mm	Nr. 20  M5 - 16	Nr. 22  M5 - 45(50)
Durų - lango surinkimas Door - window installation	 The diagram illustrates the assembly of a door or window frame. It shows a central rectangular frame labeled 'M5-16'. This frame is surrounded by a larger rectangular border made of 'M5-45(50)' profiles. Arrows point from the text labels to the specific locations where the M5-45(50) profiles are attached to the M5-16 frame at the corners and midpoints of the sides.				


Durų - lango tvirtinimas prie karkaso
Door - window installation by the frame

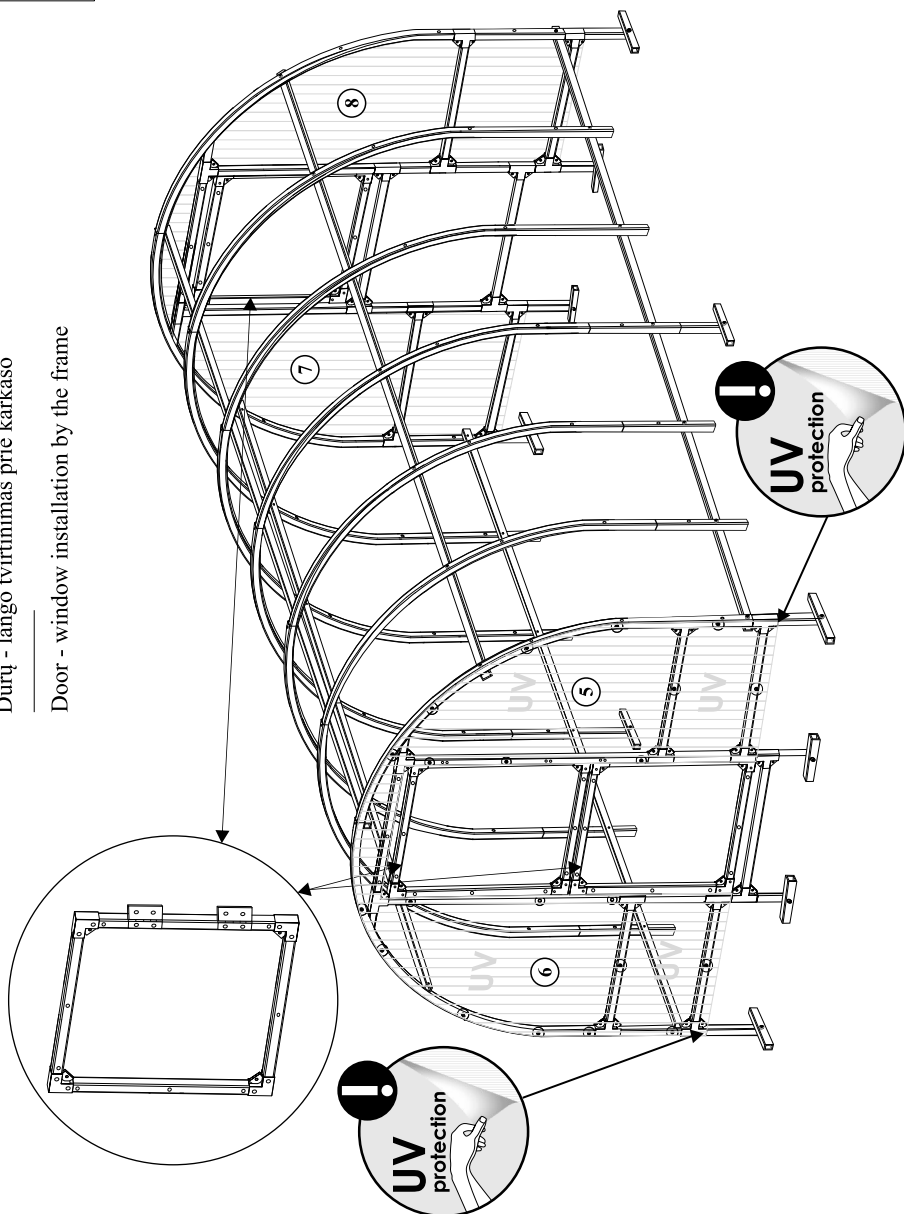

Nr. 22  M5-45(50)	Nr. 24  4,2x19 cm	Nr. 25  M5
Nr. 27 	Nr. 28 	

Šoninių dalių ir durų dangos montavimas (priekis)

Installation of the polycarbonate to the side parts and door cover (front)

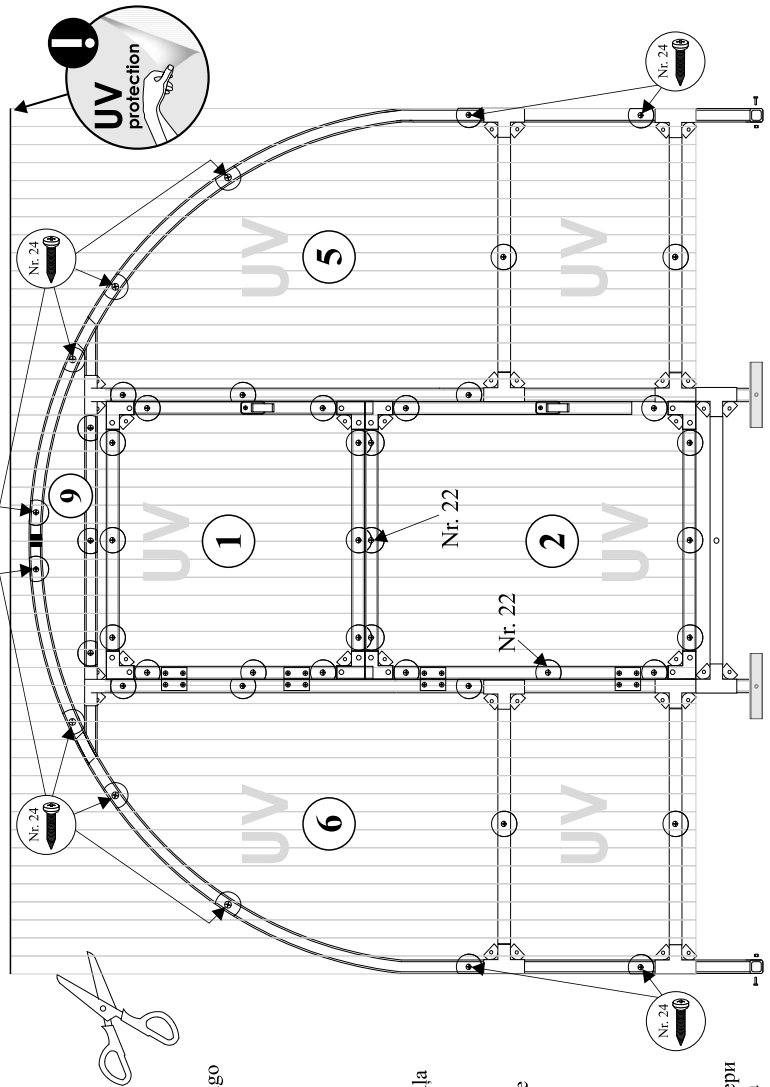

LT	5 6 Šoninė dalis 9 Viršutinis durų lango polikarbonatas
EN	5 6 Side part 9 Top door window polycarbonate
LV	5 6 Sānu daļa 9 Polikarbonāta detaļa virs durvīm
EE	5 6 Külgmised osad 9 Ukse akna ülemine polikarbonaat
DE	5 6 Seitenteil 9 Oberes Türfenster aus Polycarbonat
RU	5 6 Боковая часть 9 Окно верхней двери из поликарбоната

LT

- ③ Lango apakša
 ④ Langas
 ⑦ ⑧ Šoninė dalis
 ⑨ Viršutinis durų lango polikarbonatas

EE

- ③ The bottom of the window
 ④ Window
 ⑦ ⑧ Side part
 ⑨ Top door - window polycarbonate

LV

- ③ Loga apakša
 ④ Logs
 ⑦ ⑧ Sānu daļa
 ⑨ Polikarbonāta detaļa virs durvīm

EE

- ③ Akende alus
 ④ Aken
 ⑦ ⑧ Külgmised osad
 ⑨ Ükste akna ülemine polükarbonaat

DE

- ③ Unten im Fenster
 ④ Fenster
 ⑦ ⑧ Seitenteil
 ⑨ Oberes Türfenster aus Polycarbonat

RU

- ③ Нижняя часть окна
 ④ Окно
 ⑦ ⑧ Боковая часть
 ⑨ Окно верхней двери из поликарбоната

Nr. 22

 M5-45(50)

Nr. 25


 M5



Nr. 27



Nr. 28


Galinės dalies dangos montavimas
 The rear part installation

12

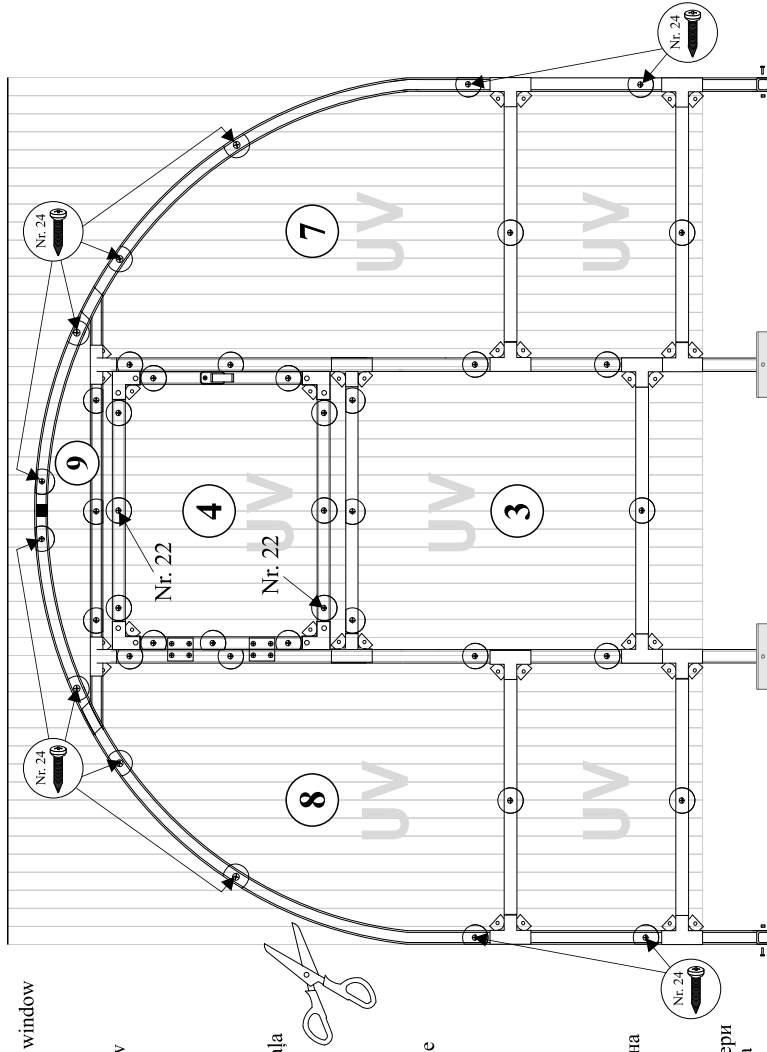

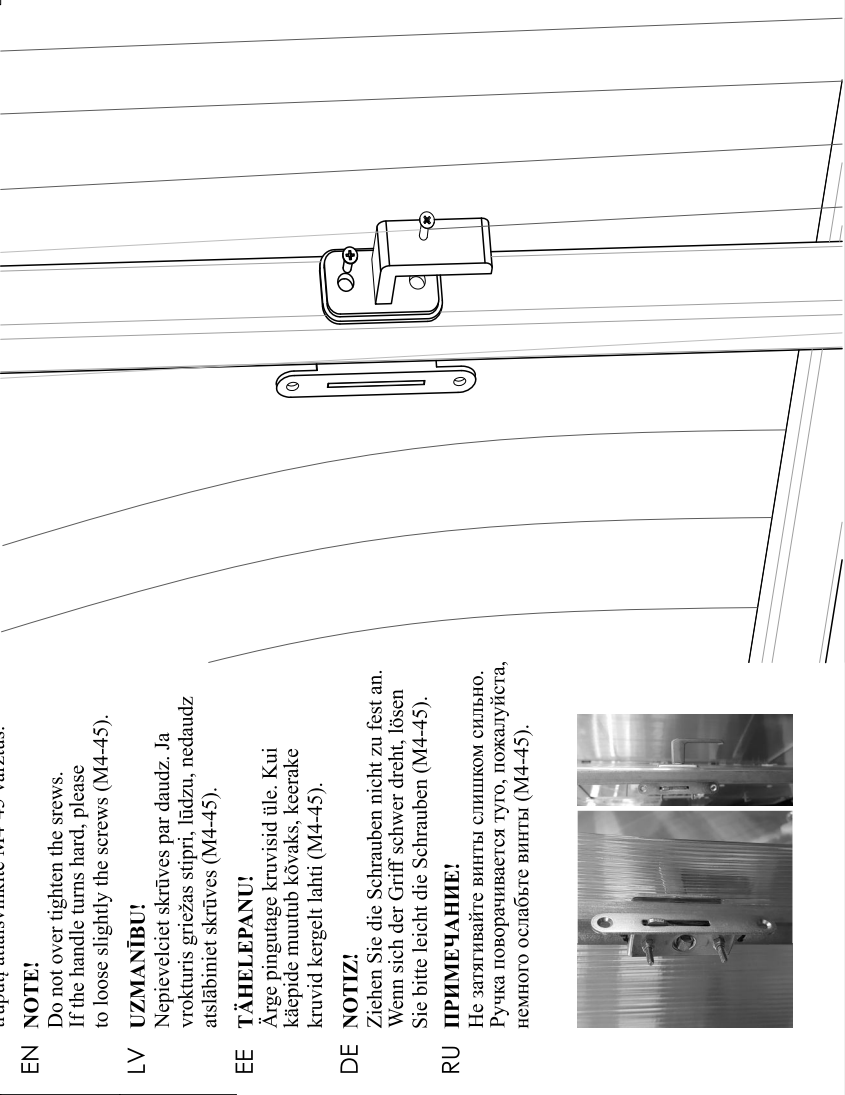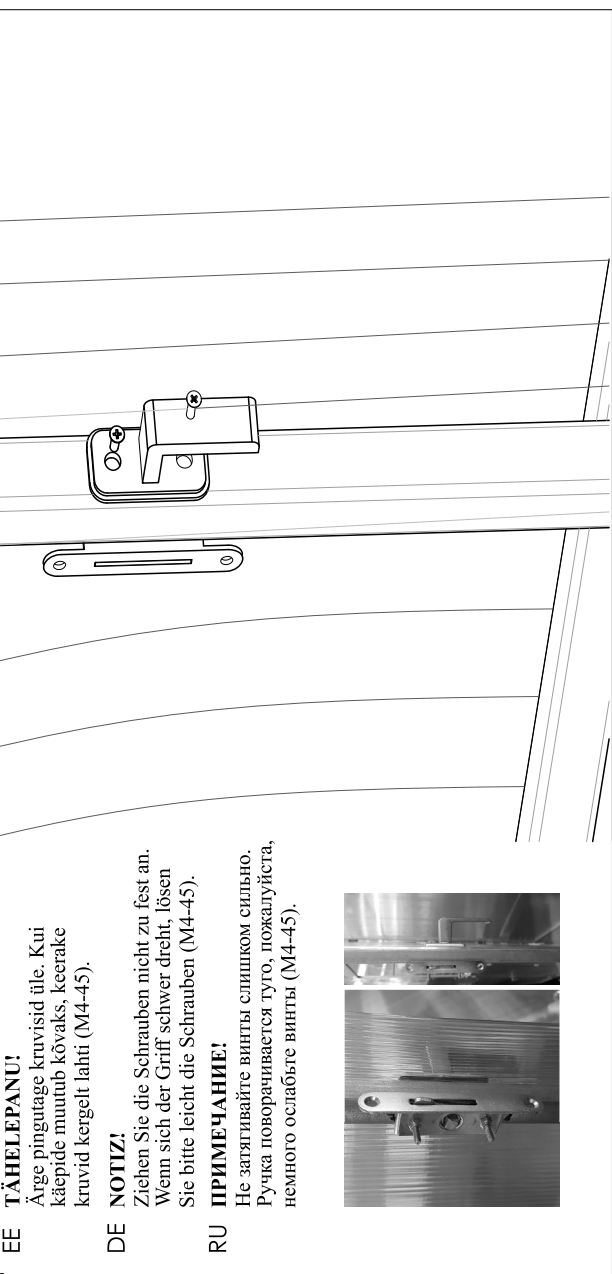Nr. 23  M4-45	LT SVARBU! Tvirtindami rankeną neperveržkite varžtų, kad nesuspaustų spynelės. Jei sunkiai sukiniūsi rankeną, truputį atlaisvinkite M4-45 varžtus. EN NOTE! Do not over tighten the screws. If the handle turns hard, please to loose slightly the screws (M4-45). LV UZMANĪBU! Nepievelciot skrūves par daudz. Ja vroturis griežas stipri, lūdzu, nedaudz atslābiniet skrūves (M4-45). EE TÄHELEPANU! Ärge pingutage kruvisid üle. Kui käepide muutub kõvaks, keerake kruvid kergelt lahti (M4-45). DE NOTIZ! Ziehen Sie die Schrauben nicht zu fest an. Wenn sich der Griff schwer dreht, lösen Sie bitte leicht die Schrauben (M4-45). RU ПРИМЕЧАНИЕ! Не затягивайте винты слишком сильно. Ручка поворачивается туго, пожалуйста, немного ослабьте винты (M4-45).	Durių - lango rankenos tvirtinimas Door - window handle installation	13
Nr. 26  M4			
Nr. 29  M4-45			



2100 x 6000 mm

Nr. 22



M5 - 45(50)


Nr. 27



Nr. 25



M5

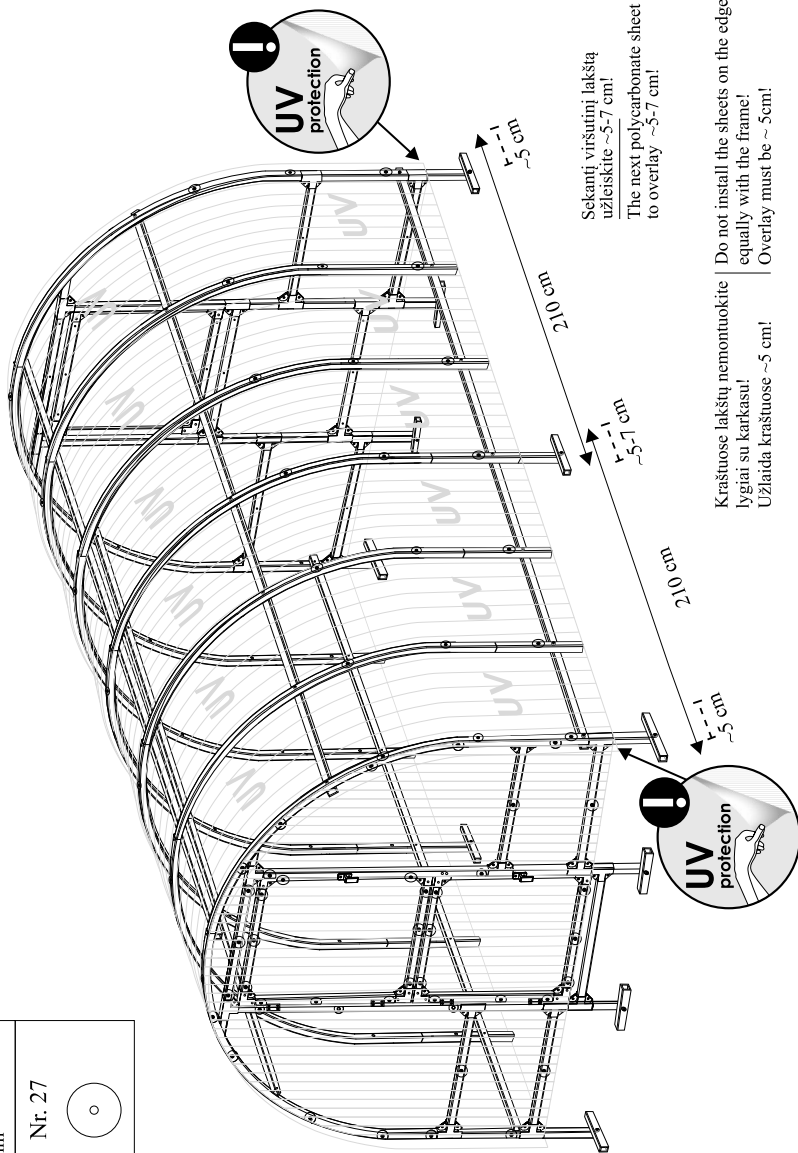

Sekanti viršutini lakštą užleiskite ~5-7 cm!
The next polycarbonate sheet to overlay ~5-7 cm!

Do not install the sheets on the edges
equally with the frame!
Overlay must be ~ 5cm!

Kraštuose lakštų nemontuokite
lygiai su karkasu!
Užlaida kraštuose ~5 cm!

List of parts


Title		Length, mm	KLASIKA Easy		
			6m ²	12m ²	2m extension
Nr. 1	Arch	2300	4	7	3
Nr. 2	Arch	2350	4	7	3
Nr. 3	Fasteners to the ground	350	4	6	2
Nr. 5	Lateral lower arch stud (left, right)	670	8	14	6
Nr. 7	Fasteners to the ground - crossbars	170-200	8	10	2
Nr. 8	Arch fastening - crossbars	2050	—	5	5
Nr. 9	Arch fastening - crossbars	2000	5	5	—
Nr. 10	Door - window stud	2210	2	2	—
Nr. 11	Door - window stud with more holes	2210	2	2	—
Nr. 12	Lateral anchoring of front-rear part	970	4	4	—
Nr. 12.1	Lateral anchoring of front-rear part	950	4	4	—
Nr. 13	Door-window transverse strut (with cut ends at 45°)	1320	2	2	—
Nr. 14	Transverse fastening under the window (rear of the greenhouse)	965	3	3	—
Nr. 20	Bolts M5-16	I-16	64	64	—
Nr. 22	Bolts M5-45(50)	I-45	158	201	43
Nr. 23	Bolts M4-45	I-45	6	6	—
Nr. 24	Self-tapping screws	4,2 x 19	29	29	—
Nr. 25	Nuts M5		222	265	43
Nr. 26	Nuts M4		6	6	—
Nr. 27	Gaskets, transparent		55	73	18
Nr. 28	Gaskets, transparent (half)		52	52	—
Nr. 29	Set of handles		3	3	—
Nr. 30	Forket-type connection		24	24	—
Nr. 31	T-piece connection		52	52	—
Nr. 32	The hinges		6	6	—
Door - window					
Door Nr.1	Door part with hinges	885	3	3	—
Door Nr.2	Door part with handles	885	3	3	—
Door Nr.3	The bottom/upper parts of the door (horizontal part)	950	6	6	—

* Possible error of tolerance of part lengths $\pm 1-4$ mm

Polycarbonate dimensions

	Width/ Height (mm)	6m ²	12m ²	2m extension	Remark
① The upper part of the door	1050 x 1000	1	1	—	SHEET CUTTING DEPENDS ON THE COMPLETION SET! If you only received large sheets of 2100x6000mm (6m ² - 2 pcs.; 12m ² 2-3 pcs., ets.), all these details are cut from one sheet of 2100x6000mm according to the provided cutting scheme. Large sheets 2100x6000mm are used for the roof and 1050x2000mm are used for the front and rear part of the greenhouse. Follow the dimensions given in the table of polycarbonate dimensions.
② The bottom part of the door	1050 x 930	1	1	—	
③ The bottom of the window	1050 x 910	1	1	—	
④ Window	1050 x 1040	1	1	—	
⑤ ⑥ ⑦ ⑧ Side parts	1050 x 2000	4	4	—	
⑨ Top door-window polycarbonate	1050 x 180	2	2	—	
⑩ Top part	210 x 6000	1	2	1	

Polycarbonate cutting schema

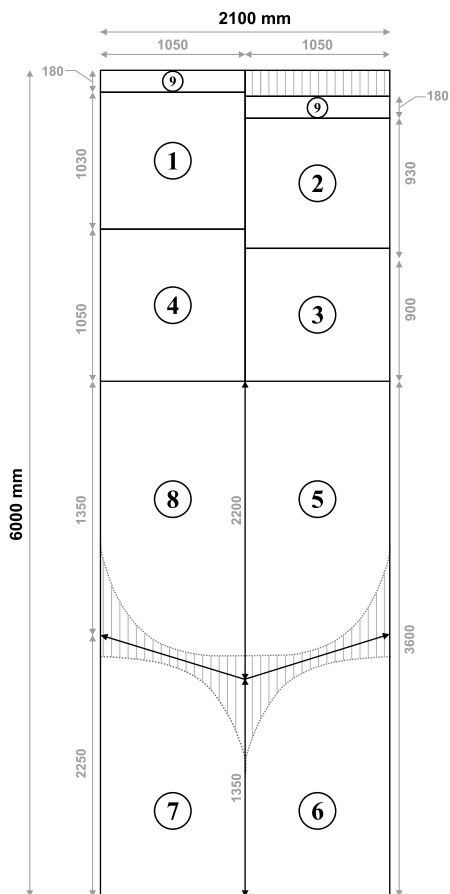

① The upper part of the door
② The bottom part of the door
③ The bottom of the window
④ Window
⑤ ⑥ ⑦ ⑧ Side parts
⑨ Top door-window polycarbonate